



TOKICO
GAS *shocks*

HITACHI
Inspire the Next

© Hitachi Automotive Products (USA), Inc.
Los Angeles Plant
475 Alaska Avenue, Torrance, CA 90503
Tel: 310.212.0200 Fax: 310.212.0222
URL: <http://www.hitachi-hap-la.com>

KEEP YOUR RECEIPT!

TOKICO's warranty is limited to the original purchaser. Processing any warranty claim requires a copy of the original invoice and/or your warranty card that will be on file after mailing back. Please see warranty card for more specifics of coverage and claim procedures.

INSTALLATION NOTES:

Removal and installation of complete struts / shocks are best done by professional technicians. When performing installation please follow according to factory manual. Many TOKICO shocks come with dust covers, while others are designed to re-use the original equipment dust cover. Failure to use dust covers where called for could cause premature failure and void the warranty.

When removing the shocks, be certain that any mounting hardware, which must be re-used, is in good condition. If the piston rod is damaged as the result of using tools directly on the rod during installation or removal, warranty will be denied. Stem mount bushings should not be over tightened as this can cause bushing failure or top stem snapping off.

LOWERING CAUTIONS:

If you are lowering your vehicle or installing shocks on a lowered vehicle, please read the following recommendations:

1. Do not remove or operate your vehicle without bumpstops. If you need extra suspension travel, please shorten your bumpstops. A good guideline is 1/3" or 1/2" (maximum) of the bumpstop length.
2. Do not lower your vehicle too far. It will give you a harsh ride and can damage shocks and other suspension parts. It can also make alignment difficult to impossible.
3. Avoid lowering in areas where severe rough roads are common.

YOUR TOKICO WARRANTY WILL BE VOID IF:

1. You lower your vehicle too far (most cars can handle 1" to 1 3/4" maximum; some trucks can be lowered over 4" depending upon method).
2. You modify the shock or strut (an example would be aftermarket adjustable spring seats and collars).

*PLEASE SEE TOKICO WARRANTY CARD FOR MORE DETAIL.

HP
SERIES

illuminance
Adjustable-5

TREKMASTER^{RT}

illuminance
Adjustable-5

TOKICO

PERFORMANCE SHOCKS

TOKICO (USA) INC.
550 West Artesia Blvd.
Compton, CA 90220

Tel: (310) 357-2220
(800) 548-2549
Fax: (310) 212-0222


INSTRUCTIONS FOR HPS5053, HPK217, ILK218

INSTALLING TOKICO SPRINGS

CAUTION:

These coil springs store tremendous energy when compressed. Remove and install in accordance with the factory service manual. If you lack the correct tools and / or experience for this job, have it done by a professional.

Before removing the original springs, (with the vehicle on a level surface), measure all four corners according to fig.

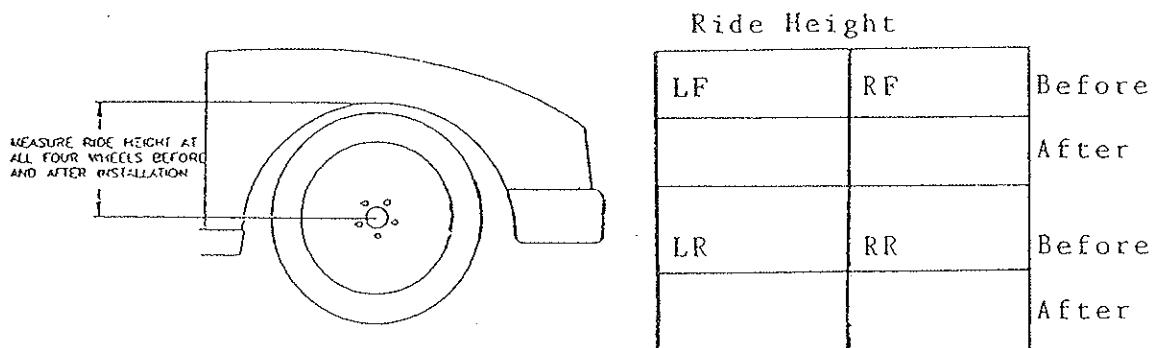

PLEASE DO NOT CUT THE BUMPSTOP

Upon disassembly note the condition of all factory bump stops and dust boots. Replace any defective or worn parts.

HP
SERIES

ILLUMINANCE
Adjustable-5

TREKMASTER^{RT}

ILLUMINANCE
Adjustable-5