



CUSTOM ACCESSORIES

REPLACEMENT STEERING WHEEL SPOKE INSERTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: REPLACEMENT STEERING WHEEL SPOKE INSERTS

2. APPLICATION: 05-UP FORD MUSTANG

3. PART NUMBER: SII P/N
SWP-3230

4. KIT CONTENTS:

ITEM	QTY	DESCRIPTION
A	3	P/N : SW-3230 Replacement Steering Wheel Spoke Inserts
B	1	Installation Instructions

5. TOOLS REQUIRED: None

6. PRE-INSTALLATION CAUTIONS / NOTES:

Read the installation sheet and check the entire kit for possible damage or defects before performing any work.



1. Locate outer edge of plastic spoke insert (**Fig. 1**)
2. Separate spoke insert by carefully pulling on outer edge up and towards the centre of the wheel (**Fig. 2**)

CAUTION! It is important that you pull spoke insert towards centre of wheel when removing to ensure insert tabs are not damaged





REPLACEMENT STEERING WHEEL SPOKE INSERTS

Fig. 3




Fig. 4



Fig. 5



Fig. 6

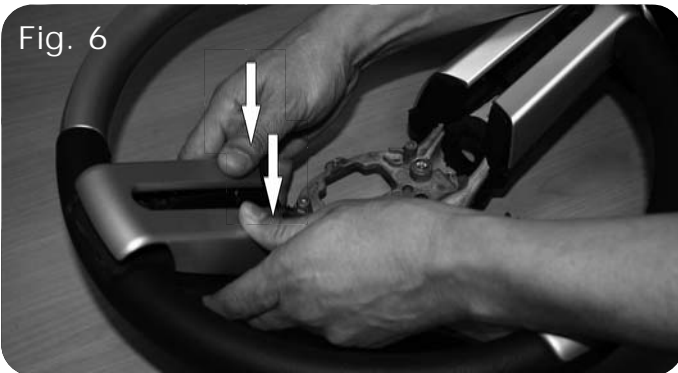

3. Continue to carefully pull/peel the spoke insert up and towards the centre of the wheel until it releases (**Fig. 3 - 4**)
4. Locate proper replacement spoke insert
5. Line up spoke insert tabs with holes in steering wheel spoke starting at the centre of the wheel (**Fig. 5**)
6. Once properly aligned, apply pressure to spoke insert replacement towards the centre of the wheel until the spoke insert tabs snap into place (**Fig. 6**)
7. Continue to apply pressure working towards the outside of the steering wheel rim until spoke insert replacement has completely snapped into place (**Fig 7-8**)
8. Repeat steps 1-7 for remaining 2 spoke inserts

Fig. 7



Fig. 8

